

COMPASS



GAME WORKS

Compass Game Works
P O Box 8771
Corpus Christi TX 78468
866-656-7277
www.theactionback.com

How To Connect The Remote To “The Action Back”

Remove the motor box door by unscrewing the wing nut on the front of the motor box. Unplug the pushbutton switch by pushing down on the lever on the connector and gently pulling it apart. Disconnect the battery terminal from the battery. You can remove the pushbutton switch from the motor box if desired and plug the hole with the rubber plug. Plug the receiver into the motor connector you removed the pushbutton switch from. Connect the battery terminal to a 9-volt battery and place the battery in the battery holder. Remove the piece of Velcro from the back of the receiver and remove the white piece of paper to reveal the adhesive. Place the Velcro inside the motor box on the left side of the box. This will give a mounting surface for the receiver to adhere to. Start to run the black wire of the antennae through the small hole in the side of the motor box. Place the remote receiver inside the motor box with the wiring pointing forward and secure the unit by sticking the Velcro pieces together. Pull the antennae wire through the hole and bend it around the plate under the motor box to secure the wire. Replace the door and secure the wingnut. The remote unit is now ready for use. To use the remote, push the button on the “keychain” remote to activate the motor and push once more to stop. !! Disconnect battery between uses !! The receiver will drain the battery when not in use.